





# Natures Composites

## Premium Sustainable Fencing

### 6' Traditional Fence Installation Guideline

#### Before You Begin

1. Verify Location of Underground Utilities
2. Locate Property Lines
3. Consult Local and Regional Building Codes
4. Always Wear Appropriate Safety Equipment
5. Standard Woodworking Tools May Be Used

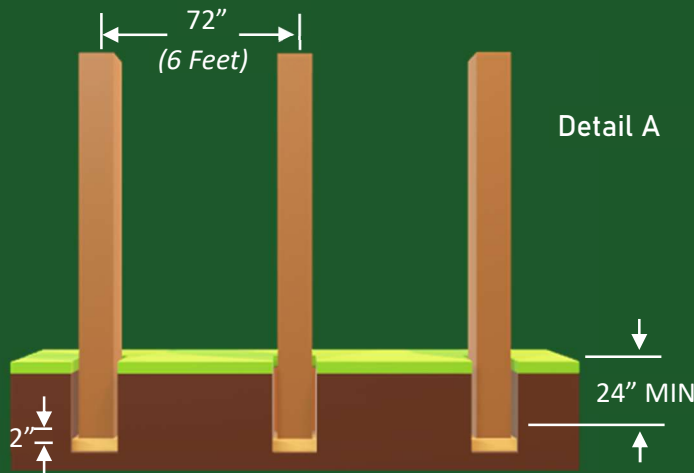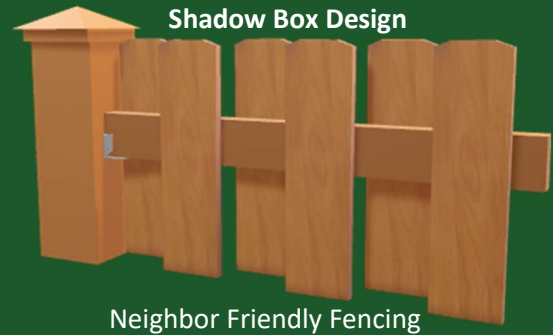


#### Post Installation

1. Dig 12" Diameter Hole 24" -36" Deep Depending on Local Building Codes (Detail A)
2. Add 2" of Gravel to Bottom of Holes
3. Set Posts in Minimum 24" of Concrete
4. Before Concrete Sets, Plumb and Level Posts Making Sure to Use a Stringline to Maintain Alignment
5. Allow Concrete to Properly Set Before Proceeding

#### Picket Installation

1. After Posts Are Set, Fasten (3-4) Cross Rails To The Post (See Detail B)
  - Recommend 4 Rails for 6' Post
2. Fasten Pickets to Rails With (2) Composite Screws Next to Posts. Space Post and Pickets An 1/8" Apart
  - Offset Fasteners as Shown In Detail C
  - Elevate Pickets 1" Off the Ground
3. Continue Installing Pickets, Equally Spaced in The Remaining Area (**At Least 1/8" Spacing**)
4. Finish by Installing Post Caps. Use Small Screws and Pre-Drill Pilot Holes Using Minimal Torque

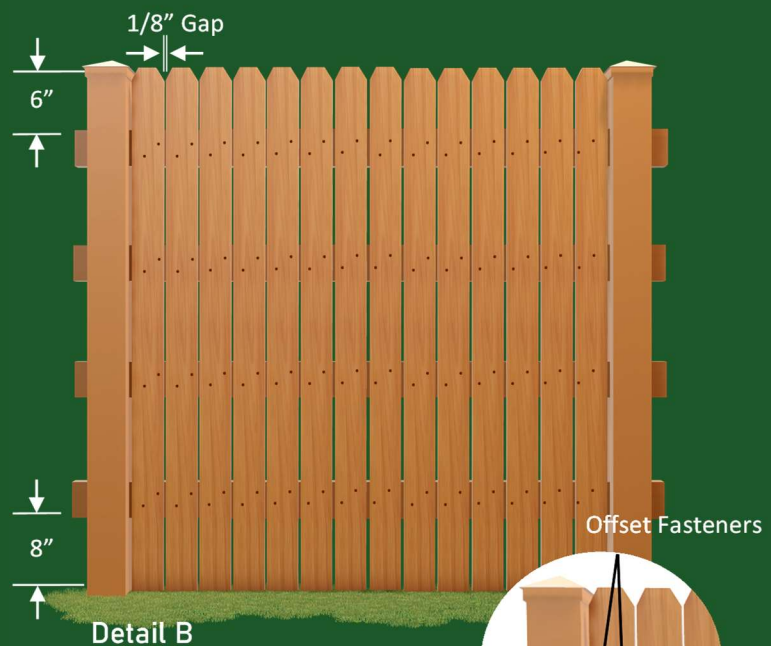

For More Information, Please Visit  
<https://www.naturescomposites.com>